



---

## Wide band Tx & Rx for Yeasu FTM-10E

Author: Dave Witts G8NKV

---

1. Remove top Cover of main unit and position set so that the large square microprocessor is in the top right hand corner.
2. To the left of this microprocessor, remove the 0 Ohm shorting link, (this looks like a surface mount resistor) as shown in the photo.



3. Reset the radio using the method shown in the owners manual, and radio should now operate over Tx & Rx VHF 140-174Mhz & UHF 430-470Mhz
- 

This article is printed with permission from mods.dk the 17-09-2007. This printed article must only be used for non-commercial purposes; this is only for private use.

© Copyright mods.dk 1996 - 2007